



# frequently asked questions

---

## RESETTING THE HYDRA DEPTH BOARD (Node 1)

---

Following the procedure detailed below will reset the 'Depth Board' PCB in the main processor to the factory default settings. The procedure is as follows:

### **WARNING**

**Resetting the depth board will erase any calibration values you may have entered; for example, Boat Speed Calibration, Depth Alarms, Stored Log and Depth Datum.**

1. Perform a 'software' power down by pressing and holding the **LIGHTS** key.
2. Press and hold the **ENTER/RESET** key and the **LIGHTS** key simultaneously until the display shows "Diagnost".
3. Press the **ENTER/RESET** key once, the display will show "Key Test".
4. Press the ▼ (DOWN ARROW) key repeatedly to scroll through the menu until the display shows "Res Sys".
5. Press the **ENTER/RESET** key once to enter the reset menu.
6. Press the ▲ (UP ARROW) key until the display reads 0001 (Node 1).
7. Press the **ENTER/RESET** key once to confirm reset.
8. Press the **PAGE** key 3 times to exit the test mode.

This concludes the DEPTH BOARD reset procedure.