

## Data Page Configuration

The display can be customised for personal preferences using the Page Contents function.

1. Use **UP/DOWN** keys to select Data Page to reconfigure.
2. Press **ENTER** key to display Main Menu.
3. Select **Page contents** menu using **UP/DOWN** keys. Press **ENTER** to confirm.
4. Use **UP/DOWN** keys to select one of five screen formats. Press **ENTER** to confirm.
5. Use **UP/DOWN** keys to select desired pane to insert data. Press **ENTER** to confirm.
6. Use **UP/DOWN** keys to scroll through display functions and press **ENTER** to confirm.
7. Use **UP/DOWN** keys to scroll to next pane and press **ENTER**.
8. Repeat this process until all panes have been configured for your chosen screen format.
9. To exit Select Pane menu, use **UP/DOWN** keys to highlight OK and press **ENTER**.
10. To exit Select Format menu, use **UP/DOWN** keys to highlight OK and press **ENTER**.
11. To exit Main Menu, use **UP/DOWN** keys to select OK and press **ENTER**.

